



Laser Scan Micrometer <Sensor>

LSM-02-A
LSM-30-A



User's Manual - Instructions for use -

Read this document thoroughly before operating
the product. After reading, retain it close at hand for
future reference.

This English language version of the document
contains the original instructions.

No. 99MBC152A1

Date of publication: June 1, 2025 (1)



■ Product names and model numbers covered in this document

Product name	Model number
Laser Scan Micrometer <Sensor>	LSM-02-A LSM-30-A

■ Notice regarding this document

- Mitutoyo Corporation assumes no responsibilities for any damage to the product, caused by its use not conforming to the procedure described in this document.
- Upon loan or transfer of this product, be sure to attach this document to the product.
- In the event of loss or damage to this document, immediately contact the agent where you purchased the product or a Mitutoyo sales office.
- Read this document thoroughly before operating the product. In particular, be sure to fully understand "Safety Precautions" on page 5 and "Precautions for Use" on page 6.
- The contents of this document are based on information current as of June 2025.
- No part or whole of this document may be transmitted or reproduced by any means without prior written permission of Mitutoyo Corporation.
- Some screen displays in this document may be highlighted, simplified or partially omitted for convenience of explanation. In addition, some of them may differ from actual ones to the extent that no user will misunderstand the functions and operations.
- The corporation, organization and product names that appear in this document are their trademarks or registered trademarks.

©2023-2025 Mitutoyo Corporation. All rights reserved.

Contents

Contents	i
About This Document	1
Conventions Used in This Document	2
Labels on Product	4
Safety Precautions	5
Precautions for Use	6
Electromagnetic Compatibility (EMC)	7
Export Control Compliance	8
Notes on Export to European Countries	8
Disposal of Products outside the European Countries	8
Disposal of Old Electrical & Electronic Equipment (Applicable in the European Countries with Separate Collection Systems)	8
China RoHS Compliance Information	9
Warranty	10
Disclaimer	10
 1 Foreword	 11
2 Calibration	13
2.1 Calibration Gage (CAL Gage)	14
3 Fixture Design	15
3.1 Consideration to Calibration	15
3.1.1 Measuring Position and Resulting Accuracy	15
3.1.2 On Measuring Gap	16
3.2 Optical Axis Alignment	17
3.2.1 Optical Axis Alignment in Horizontal Plane	17
3.2.2 Optical Axis Alignment in Vertical Plane	17
3.2.3 Permissible Error for Optical Axis Alignment	17
3.3 Confirming the Optical Axis	18
3.3.1 Confirming with the Laser Beam	18
3.3.2 Confirming the Optical Axis with an Oscilloscope	19

3.4	Measurement with Two Sensor	20
3.4.1	Orthogonal measurement	20
3.4.2	Large diameter measurement	21
3.5	Radius of Cable Bend	24
4	Inspection and Maintenance	25
4.1	Cleaning Optical Parts	25
5	Troubleshooting	27
6	Specifications of Sensor	29
6.1	LSM-02-A	30
6.2	LSM-30-A	33
SERVICE NETWORK		App-1

About This Document

■ Positioning of this document, document map

This describes the positioning of this document and its relationship with other installments.

● Sensor

LSM-02/30-A
Laser Scan Micrometer <Sensor>
User's Manual (This document)

Describes how to connect the laser scan micrometer sensor to the controller and its specifications.

● Controller

LSM-CU-A
Laser Scan Micrometer <Controller>
User's Manual

Describes how to setup and operate the laser scan micrometer controller using LSMPAK.

● I/F module

Describes how to install the optional IF modules to the laser scan micrometer controller and their specifications.

I/F module for Laser Scan
Micrometer controller<EtherNet/IP>
User's Manual

I/F module for Laser Scan
Micrometer controller<PROFINET>
User's Manual

I/F module for Laser Scan
Micrometer controller<EtherCAT>
User's Manual

I/F module for Laser Scan
Micrometer controller<CC Link>
User's Manual

■ Intended readers and purpose of this document

● Intended readers

This document is intended for users and administrators of the Laser Scan Micrometer.

● Purpose

This document is aimed at understanding an overview, specifications, and details for the maintenance of the Laser Scan Micrometer <Sensor> as well as precautions to be observed when detaching the emission and reception units from the mount and attaching them to a dedicated fixture for use.

Conventions Used in This Document

■ Safety reminder conventions warning against potential hazards

	Indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury .
	Indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury .
	Indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury .
	Indicates a situation which, if not avoided, may result in property damage .
	Electricity Alerts the user to a specific hazardous situation that means "Caution, risk of electric shock".

■ Conventions indicating prohibited and mandatory actions

	Indicates concrete information about prohibited actions.
	Indicates concrete information about mandatory actions.
	Indicates that grounding needs to be implemented.

■ Conventions indicating referential information or reference location

IMPORTANT	Indicates information that must be known when using the product.
Tips	Indicates further information and details relevant for the operating methods and procedures that are explained in that section.
	Indicates reference location if there is information that should be referred to in this document or an extraneous User's Manual. Example: For details about XX, see  "1 Appellations for Each Part" on page A-5 in "Part A Overview".

■ Other conventions


(): Round brackets	Represent a paraphrase of an immediately preceding phrase or a supplementary explanation.
" ": Double quotation marks	Represent a highlighted phrase. They also indicate an index where information to be referenced is described.
[]: Square brackets	Represent a menu name on the screen, screen name, dialog name, button, display item, tab name, or key on the keyboard. They also indicate an item to be purposely entered or selected by the customer.

Labels on Product

Product safety labels

This product has been designed and manufactured with human safety as a priority. In order to use it more safely, product safety labels have been applied to the main body and all peripheral devices. This section explains the meaning and the contents of each safety label on the product.

Before operating this product, be sure to carefully read this section to use this product safely and for a long time.

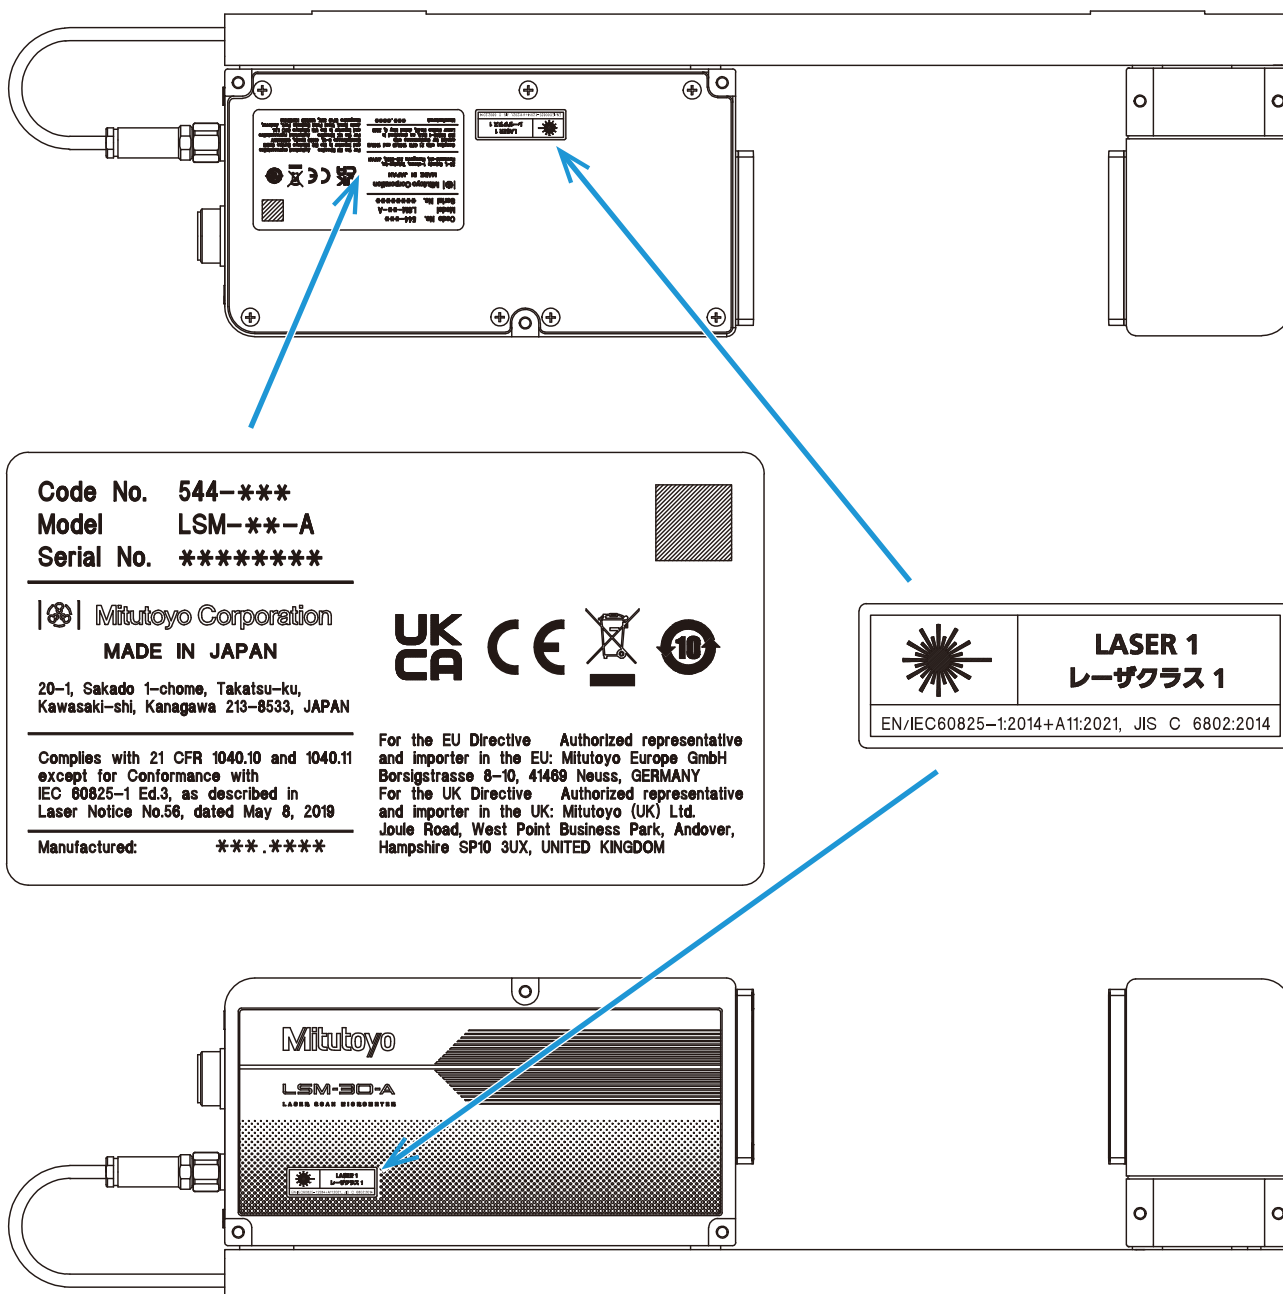

Safety Precautions

Read these "Safety Precautions" thoroughly before operating the product to use it properly.

These safety precautions include such information as to prevent injury to the operator and other persons, damage to property and product defects. Be sure to observe these precautions carefully.

■ Safety precautions for sensor laser beam

This product uses a visible-light laser. Use of controls, adjustments, or operations other than specified herein may result in hazardous radiation exposure.

CAUTION

- The IEC standard "IEC 60825-1" is used for the safety standard of the laser equipment.
- This is a "Class 1 laser product" in the IEC standard.
- Do not look directly into the laser beam. Never look into the emission window even if it seems that no light is being emitted from there.
- Do not look directly at the laser beam through an optical instrument (magnifying glass or other light-condensing device).
- If the workpiece has a mirror finished surface, avoid looking at the reflection on the surface.
- Never remove laser class identification labels attached to the Sensor.



- Skin irradiation is not a particular problem.

■ Other notes

NOTICE

- Make sure to fasten the screw of the connector with the specified torque when connecting the cables. Insufficient torque or excessive torque when connecting the connector can cause liquid and dust to enter and damage the body.
Specified tightening torque for signal cable: 1.0 ± 0.3 N·m
Specified tightening torque for transmission cable: 0.8 ± 0.2 N·m (LSM-30-A only)
- Never touch the terminal of a connector. Otherwise, contact may be poor.



Unplug the power cord of the controller and then the connection cables when a system failure is encountered.



- Never remove the protective glass. If removed, the protection grade: IP67 is not guaranteed.
- Never disassemble the emission and reception units. If disassembled, the protection grade: IP67 is not guaranteed.
(The LSM-30-A mount is removable.)

Precautions for Use

■ Use and handling of the product

- Use this product only by connecting to measuring instruments which supports this product.

Do not use this product for measuring instruments which does not support this product.

For measuring instruments supported by this product, contact the agent where you purchased the product or a Mitutoyo sales office.

- This product is for industrial usage.

Do not use this product for purposes other than for industrial usage.

- The product is a precision instrument.

Do not subject the product to drastic shocks such as dropping it, or exert excessive force upon it.

Do not disassemble or modify the product.

If the product is used beyond the conditions indicated in the specifications ( "6 Specifications of Sensor" on page 29), be aware that the functions and performance cannot be guaranteed.

■ Environment for placement

This product is a precision optical and electronic instrument intended for indoor use. It must be carefully installed under the following conditions to attain the highest possible accuracy. Mitutoyo assumes no responsibility for accident or failure arising from failure to observe these items.

- Vibration

Install this product in a place where it will not be subject to vibration. If this product is used for an extended period of time in an environment where there is significant vibration, the precision parts in this product may be affected, resulting in the deterioration of measuring accuracy.

If this product has to be used in an environment where vibration is significant, take measures to reduce the effect of vibration such as a vibration damping rubber pad laid under the product.

- Dust • Water

Dust and water at the installation site may adversely affect optical components such as the sensor's protective glass and the accuracy of measurements. Therefore, install the sensor in a place with as little dust and water as possible.

IP 67 does not guarantee use in water. Protection Grade: See IP 67 (For details, see IEC 60529 and JIS C 9020.).

The controller connector of the signal cable and the controller body are not waterproof. Do not use this product if it is exposed to water or oil directly.

- Direct sunlight

Heat from exposure to direct sunlight may deform this product and affect the measuring accuracy.

If this product must be placed by a window where it will be subjected to direct sunlight, protect the product by shading it.

- **Air from air-conditioning equipment**

Exposure of the measuring position to warm or cold air from air-conditioning equipment may artificially refract the laser beam due to the unevenness of ambient air concentration, affecting measurement accuracy.

If this is the case, block the air by curtain or other means.

- **Ambient temperature and humidity**

This product must be operated in an environment where the temperature is between 0 and 40 °C and the humidity is between 35 and 85 % RH. Avoid installing this product where there is significant temperature or humidity change, which may reduce measuring accuracy.

- **Cleaning method**

For details on the cleaning of this product, see  "4 Inspection and Maintenance" on page 25.

- **Warming-up**

For stable measurement accuracy, warm up this product for thirty minutes to 1 hour after turning on the power.

Electromagnetic Compatibility (EMC)

This product complies with the EMC Directive and the UK Electromagnetic Compatibility Regulations; however, if this receives electromagnetic interference that exceeds these requirements, it will be out of warranty and require appropriate measures.

This product is an industrial product, and is not intended to be used in residential environment. If this product is used in residential environment, this product may cause electromagnetic interference with other instruments. In such a case, it is required to take appropriate measures for preventing such electromagnetic interference.

Export Control Compliance

This product falls into the Catch-All-Controlled Goods and/or Catch-All-Controlled Technologies (including Programs) under Category 16 of Appended Table 1 of the Export Trade Control Order or under Category 16 of the Appended Table of Foreign Exchange Control Order, based on the Foreign Exchange and Foreign Trade Act of Japan.

If you intend re-export of the product from a country other than Japan, re-sale of the product in a country other than Japan, or re-provision of the technology (including program), you are obligated to observe the regulations of your country.

Also, if an option is added or modified to add a function to this product, this product may fall under the category of List-Control Goods and/or List-Control Technology (including Programs) under Category 1 - 15 of Appended Table 1 of the Export Trade Control Order or under Category 1 - 15 of the Appended Table of Foreign Exchange Control Order, based on Foreign Exchange and Foreign Trade Act of Japan. In that case, if you intend re-export of the product from a country other than Japan, re-sale of the product in a country other than Japan, or re-provision of the technology (including program), you are obligated to observe the regulations of your country. Please contact Mitutoyo in advance.

Notes on Export to European Countries

When you intend exporting of this product to any of the European countries, it may be required to provide User's Manual(s) in English and Declaration of Conformity in English (in some cases, the official language of the country to be exported). For detailed information, please contact Mitutoyo in advance.

Disposal of Products outside the European Countries

Please follow the official instruction in each community and country.

Disposal of Old Electrical & Electronic Equipment (Applicable in the European Countries with Separate Collection Systems)



This symbol on the product or on its packaging is based on WEEE Directive (Directive on Waste Electrical and Electronic Equipment), and this symbol indicates that this product shall not be treated as household waste.

To reduce the environmental impact and minimize the volume of landfills, please cooperate in reuse and recycle.

For how to dispose of the product, please contact the agent where you purchased the product or a Mitutoyo sales office.

China RoHS Compliance Information

This product meets China RoHS requirements. See the table below.

产品中有害物质的名称及含量

部件名称	有害物质					
	铅	汞	镉	六价铬	多溴联苯	多溴二苯醚
	(Pb)	(Hg)	(Cd)	(Cr(VI))	(PBB)	(PBDE)
本体	○	○	○	○	○	○
电气设备部分	×	○	○	○	○	○
配件	○	○	○	○	○	○

部件名称	有害物质			
	邻苯二甲酸二正丁酯	邻苯二甲酸二异丁酯	邻苯二甲酸丁基苄酯	邻苯二甲酸二(2-乙基己)酯
	(DBP)	(DIBP)	(BBP)	(DEHP)
本体	○	○	○	○
电气设备部分	○	○	○	○
配件	○	○	○	○

本表格依据 SJ/T 11364 的规定编制。
○: 表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求以下。
×: 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 规定的限量要求。



环保使用期限标识是根据《电器电子产品有害物质限制使用管理办法》以及《电器电子产品有害物质限制使用标识要求(SJ/T11364—2024)》制定的,适用于中国境内销售的电子电气产品的标识。

电器电子产品只要按照安全及使用说明内容在正常使用情况下,从生产日期算起,在此期限内产品中含有的有毒有害物质不致发生外泄或突变,不致对环境造成严重污染或对其人身、财产造成严重损害。

产品使用后,要废弃在环保使用年限内或者刚到年限的产品,请根据国家标准采取适当的方法进行处置。

另外,此期限不同于质量/功能的保证期限。

Warranty

This product has been manufactured under strict quality management, but should it develop problems within one year of the date of purchase in normal use, repair shall be performed free of charge. Please contact the agent where you purchased the product or a Mitutoyo sales office ( "SERVICE NETWORK" on page App-1). This warranty, however, shall not affect any provisions of the Mitutoyo Software End User License Agreement.

If this product fails or is damaged for any of the following reasons, it will be subject to a repair charge, even if it is still under warranty.

- Failure or damage owing to fair wear and tear
- Failure or damage owing to inappropriate handling, maintenance or repair, or to unauthorized modification
- Failure or damage owing to transport, dropping, or relocation of the instrument after purchase
- Failure or damage owing to fire, salt, gas, abnormal voltage, lightning surge, or natural disaster
- Failure or damage owing to use in combination with hardware or software other than those designated or permitted by Mitutoyo
- Failure or damage owing to use in ultra-hazardous activities

This warranty is effective only where the instrument is properly installed and operated in conformance with the instructions in this manual within the original country of the installation.

EXCEPT AS SPECIFIED IN THIS WARRANTY, ALL EXPRESS OR IMPLIED CONDITIONS, REPRESENTATIONS, AND WARRANTIES OF ANY NATURE WHATSOEVER INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, NONINFRINGEMENT OR WARRANTY ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE, ARE HEREBY EXCLUDED TO THE MAXIMUM EXTENT ALLOWED BY APPLICABLE LAW.

You assume all responsibility for all results arising out of its selection of this product to achieve its intended results.

Disclaimer

IN NO EVENT WILL MITUTOYO, ITS AFFILIATED AND RELATED COMPANIES AND SUPPLIERS BE LIABLE FOR ANY LOST REVENUE, PROFIT, OR DATA, OR FOR SPECIAL, DIRECT, INDIRECT, CONSEQUENTIAL, INCIDENTAL, OR PUNITIVE DAMAGES HOWEVER CAUSED AND REGARDLESS OF THE THEORY OF LIABILITY ARISING OUT OF THE USE OF OR INABILITY TO USE THIS PRODUCT EVEN IF MITUTOYO OR ITS AFFILIATED AND RELATED COMPANIES AND/OR SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

If, notwithstanding the foregoing, Mitutoyo is found to be liable to you for any damage or loss which arises out of or is in any way connected with use of this product by you, in no event shall Mitutoyo's and/or its affiliated and related companies' and suppliers' liability to you, whether in contract, tort (including negligence), or otherwise, exceed the price paid by you for the product only.

The foregoing limitations shall apply even if the above-stated warranty fails in its essential purpose. BECAUSE SOME COUNTRIES, STATES OR JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR THE LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, IN SUCH COUNTRIES, STATES OR JURISDICTIONS, MITUTOYO'S LIABILITY SHALL BE LIMITED TO THE EXTENT PERMITTED BY LAW.


1 Foreword

This product is an accurate, non-contact measurement system capable of measuring dimensions of workpieces by high-speed scanning laser beam. With non-contact measurement capability, this system offers high-precision measurement of workpieces that are difficult for conventional measuring systems to measure, including hot workpieces, brittle or elastic workpieces, workpieces that must be kept free from contamination, and soft workpieces subject to measuring force.

This product comes in two types: the integrated sensor LSM-02-A and the separate sensor LSM-30-A. In addition, this product is connected to the LSM-CU-A controller to be used.


For details on connection with a controller, functions, and measurement procedures, see  "Controller User's Manual" of "LSM-CU-A Laser Scan Micrometer"

■ Integrated sensor : LSM-02-A

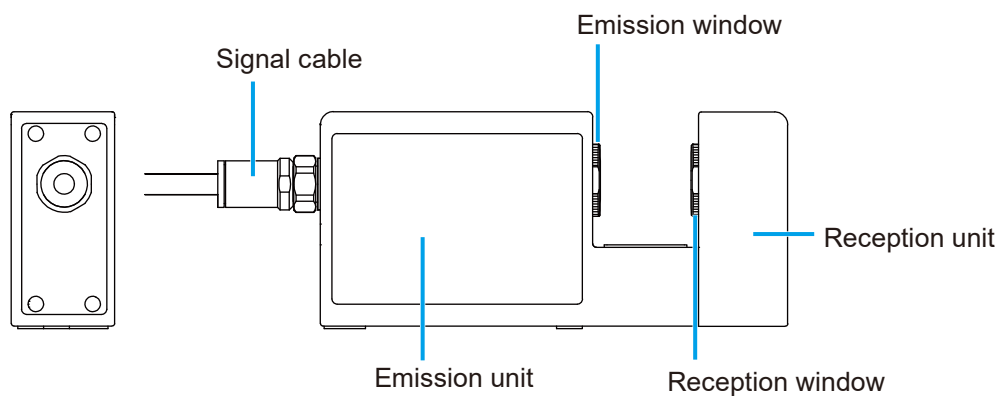

■ Separable sensor : LSM-30-A

The emission unit and reception unit can be used separately by removing the mount.

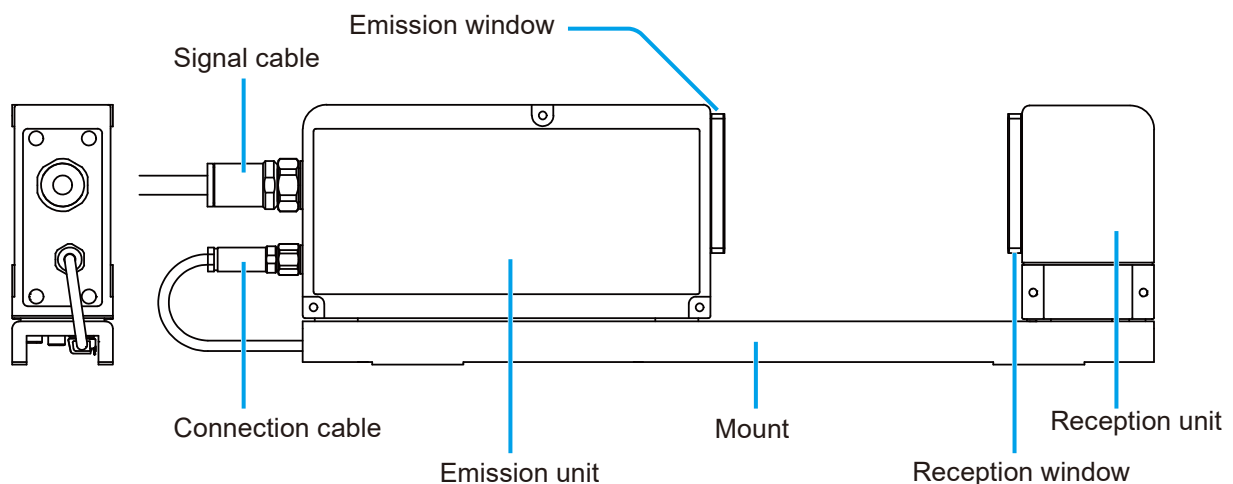

MEMO

2 Calibration

Sometimes a measurement error occurs due to the influence of the shape/material/surface state of a workpiece, installation situations, combination of the controller and sensor. Make sure to perform calibration before measurement to reduce such errors and perform high-precision measurements.

For details on the calibration operation, see  "Controller User's Manual" of "LSM-CU-A Laser Scan Micrometer".


IMPORTANT

- Selecting a gage or workpiece for calibration with a diameter and material close to that of the workpiece enables more accurate measurements. If the diameter or material is different, measurement errors may occur due to the effect of surface roughness and reflectance.
- The size ratio of the HIGH CAL gauge to the LOW CAL gauge should be 1.2 times or more in case the customer prepares a gauge or workpiece for calibration.
- Calibration with a gauge or workpiece with a small difference in diameter may result in a large measurement error.


● Types and sizes of the calibration gages (option)

When the calibration gauge set of the standard option is used for calibration, the calibration gauge set to be provided differs depending on the type of sensor used. The size and shape of the calibration gauge set are as follows:

Model		LSM-02-A	LSM-30-A
LOW CAL gage	Size	ø0.1 mm	ø1 mm
	Shape	With-holder type	
HIGH CAL gage	Size	ø2 mm	ø30 mm
	Shape	With-holder type	Stepped type

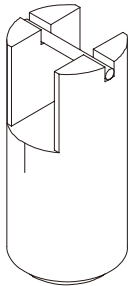

With-holder type

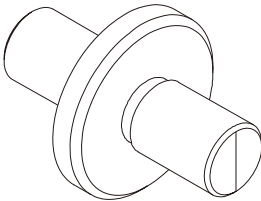


Stepped type

2.1 Calibration Gage (CAL Gage)


With-holder type

Set the gauge on the gauge stand so that the laser beam hits the "I" mark.

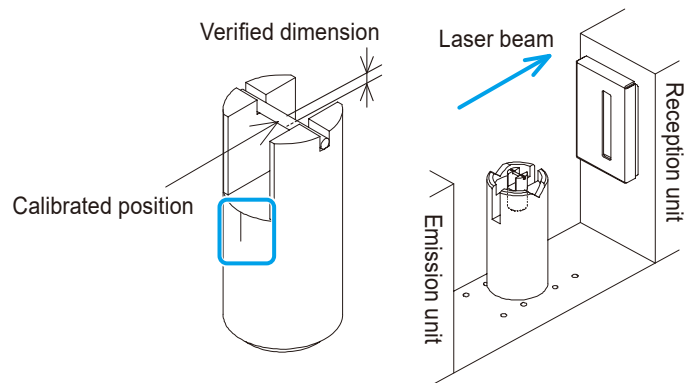

Stepped type

Set the gauge on the gauge stand so that the "I" mark is vertical.

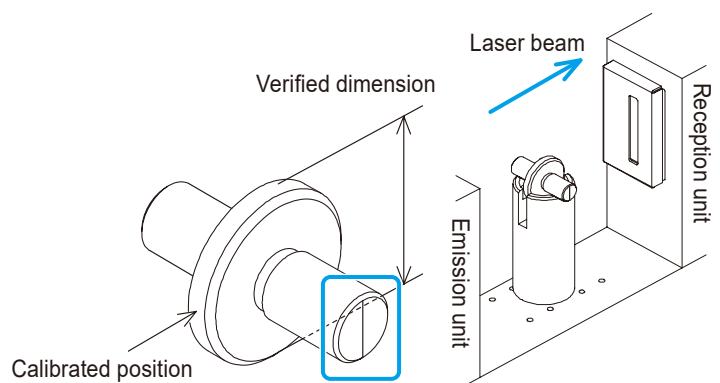

3 Fixture Design

This chapter describes precautions to be observed when attaching the emission and reception units, which have been detached from the mount of the sensor, to a specially arranged dedicated fixture.

3.1	Consideration to Calibration	15
3.2	Optical Axis Alignment	17
3.3	Confirming the Optical Axis	18
3.4	Measurement with Two Sensor	20
3.5	Radius of Cable Bend	24

IMPORTANT


In application, the emission and reception units may have to be detached from the mount of the sensor and attached to a dedicated fixture. If this is the case, the measuring accuracy cannot be ensured unless they are properly aligned on the dedicated fixture. Design a proper fixture according to this section.

3.1 Consideration to Calibration

- When designing a dedicated jig, place the workpiece at the measuring position (focal distance from the light emitting part).
- Be sure to make allowance to install a calibration gauge or workpiece, or a standard calibration gauge set.
For details on the set of workpieces, see the separate  "Laser Scan Micrometer < Controller > User's Manual".


3.1.1 Measuring Position and Resulting Accuracy

- As shown in the figure below, the scanning beam of the sensor is produced by reducing a thick laser beam to a laser beam of the minimum diameter at the measuring position (focal position). Since the inclination of the reception signal is defined as "laser beam diameter/scanning speed", it is the steepest at the measuring position (b) and less steep at points (a) and (c), off from the measuring position.
- The less steep the inclination of the reception signal, the more susceptible the signal is to noise and ambient light, deteriorating the repeat accuracy. Due attention should be paid to ensure that the workpiece is located at the measuring position.

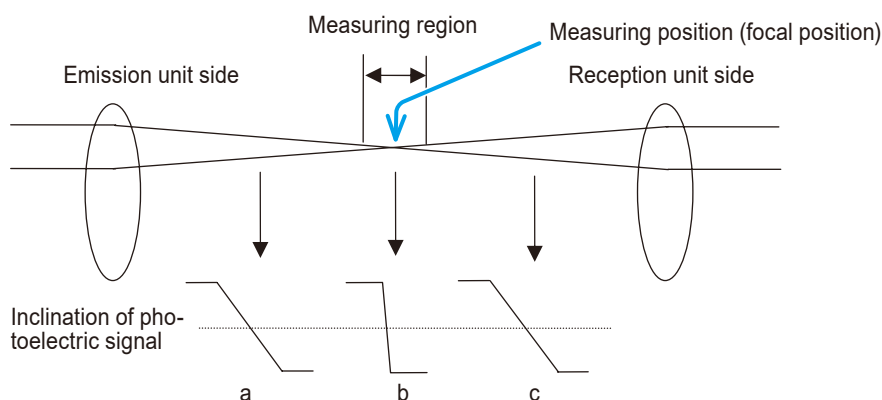

3.1.2 On Measuring Gap

For measuring "segment 1", as in the case of measuring the run-out, be sure to arrange a reference bar or edge at the focal position, as shown on the right.

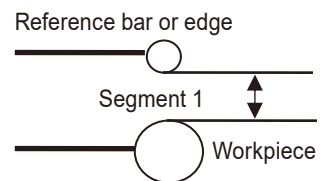


IMPORTANT

Without a reference bar, the inclination of the reception signal becomes larger, deteriorating repeat accuracy. For details, see  figures (a and c) in "3.1.1 Measuring Position and Resulting Accuracy" on page 15


3.2 Optical Axis Alignment

The optical axis of each sensor should be aligned to within the limits shown below.

3.2.1 Optical Axis Alignment in Horizontal Plane

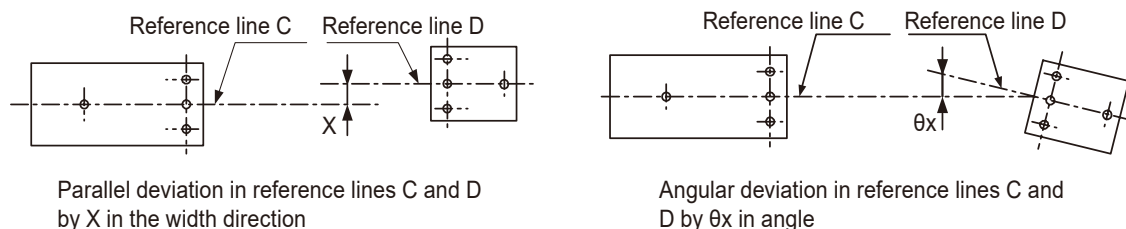

3.2.2 Optical Axis Alignment in Vertical Plane

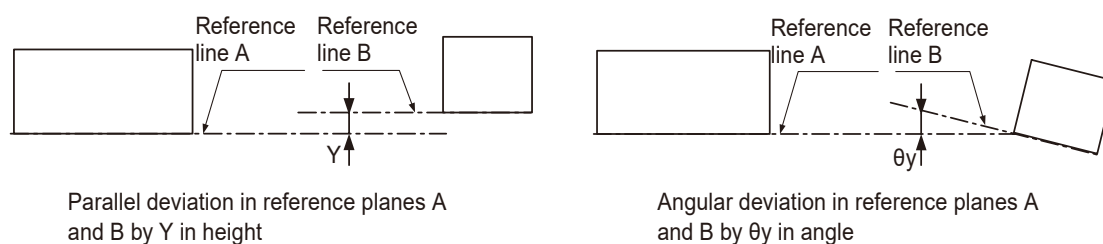

3.2.3 Permissible Error for Optical Axis Alignment

Model	Distance between emission unit and reception unit	X and Y	θ_x and θ_y
LSM-30-A	130 mm or less	1 mm or less	0.4 ° (7 mrad) or less
	350 mm or less	1 mm or less	0.16 ° (2.8 mrad) or less


3.3 Confirming the Optical Axis

The optical axis of a sensor can be confirmed by the following methods:

3.3.1 Confirming with the Laser Beam


As shown on the right, the red laser beam is visible on a piece of white paper placed on the reception window. Adjust it so that the incidence of the laser beam is in the center of the reception window.

The incidence should be horizontal in the center and at the position where "a" is equal to "b" vertically.

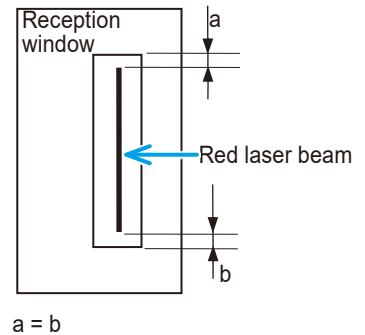

IMPORTANT

- Make adjustments to reduce the vertical deviation, horizontal deviation, and inclination of the laser beam.

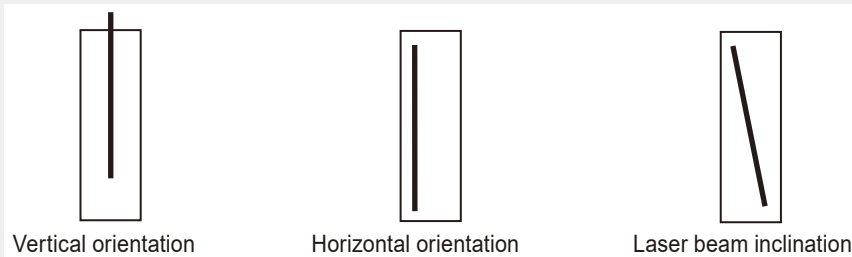

- The laser scanning range is defined by the distance between the emission and reception units mounted on the standard mount. If the distance between them is greater than the standard, a slight machining error will be amplified to an extent that disables the proper reception of the scanning beam. This should be considered when designing a dedicated fixture.


3.3.2 Confirming the Optical Axis with an Oscilloscope

Use the controller I/O interface to check the received signal. Connect pin No. 5 (scan signal output) and pin No. 6 (scan signal output ground) of the I/O terminal block connector to the probe of the oscilloscope to check the received signal.

For details on the I/O interface, see the separate "Laser Scan Micrometer Controller User's Manual."

- Oscilloscope setting
 - Vertical sensitivity: 0.1 V/DIV for a probe of 1/10
 - Horizontal sensitivity: 100 μs/DIV
- Oscilloscope waveform and measure

If the oscilloscope waveform indicates "Glass contaminated", clean the protective glass.

	Oscilloscope waveform	Measure
Normal		If the light incidence is not normal in relation to the photoelectric element, adjust the mounting position of the emission and reception units to ensure that the light comes to the center of the photoelectric element
Glass contamination		Clean the protective glass to reduce the disorder of the waveform to less than 0.3 V

For details on cleaning the protective glass, see  "4.1 Cleaning Optical Parts" on page 25

3.4 Measurement with Two Sensor

This section describes precautions for orthogonal measurement or large diameter measurement with two sensor.

IMPORTANT


To perform dual measurement with a combination of two sensors, each sensor must have been optically aligned.

For details on optical axis alignment, see  "3.2 Optical Axis Alignment" (page 17)

3.4.1 Orthogonal measurement


If a workpiece with a high-reflection coefficient is measured with two sensors being completely crossed (in a orthogonal measurement setup), the scanning beam from one sensor will be reflected into the reception window of the other sensor, reducing the measuring accuracy.

An arrangement is required in such a case so that the light from one sensor will not be reflected from the workpiece into the reception window of the counterpart sensor.

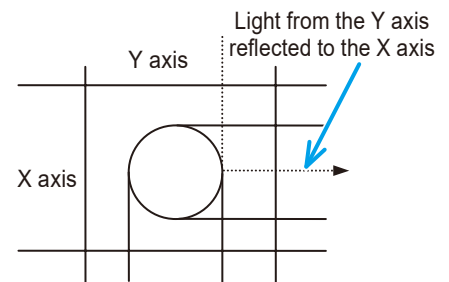


● Arrangement to provide a step

As shown on the right, arrange a step of L between the X and Y axes. The step L should not be smaller than 10 mm.

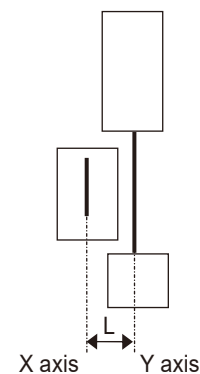

● Arrangement to provide an angle

As shown on the right, arrange an angle θ between the X and Y axes. The angle θ should not be smaller than 15° (0.25 rad).

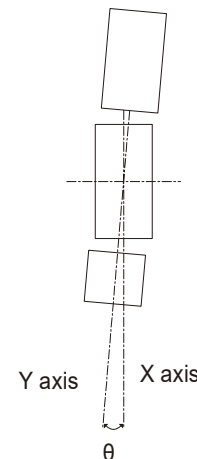

● Checking for reflecting light

This is how to check for reflected light when LSMPAK is used.

- Set to "Gap (segment 1)" to close the X-axis light emitting section. If there is no reflected light, "E0005 _ Edge Undetected Error" is displayed. Checking the display takes about 5 to 10 minutes because the X-axis and Y-axis scanning lights are not synchronized. Similarly, the Y-axis also checks for reflected light.

This is how to check for reflected light when LSMPAK is not used.


- Use the controller's I/O interface. Connect pins No. 5 (scan signal output) and No. 6 (scan signal output ground) of the I/O terminal block connector to the oscilloscope probe, and check for reflected light by checking the received signal.
- As a simple measure, you can check for reflected light by applying white paper, such as copy paper or business cards, to the receiver.

3.4.2 Large diameter measurement

In a DF-type setup shown below, a workpiece of a larger diameter can be measured by measuring the gap between the two sensors 1 and 2 and referring to the predetermined offset value of the reference gage.

■ Improvement of measurement accuracy


- To ensure better measuring accuracy of the gap measurement, use reference bars or edges located at the focal position.

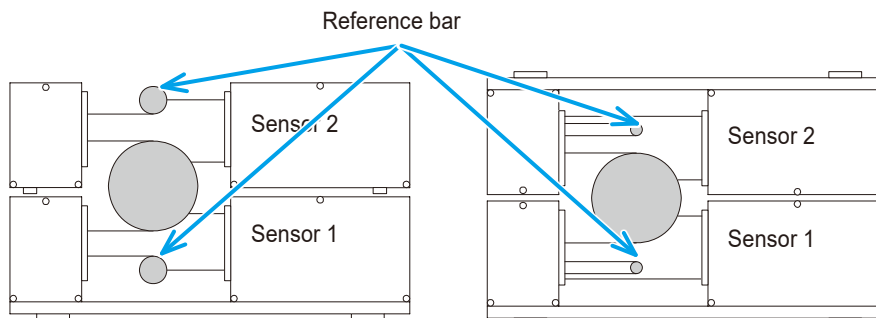

Example of stacking setup: segment (1 + 5)

Example of facing setup: segment (1 + 5)

- The reference bar will help reduce the effect of possible fluctuation of the emission unit being subject to a force.

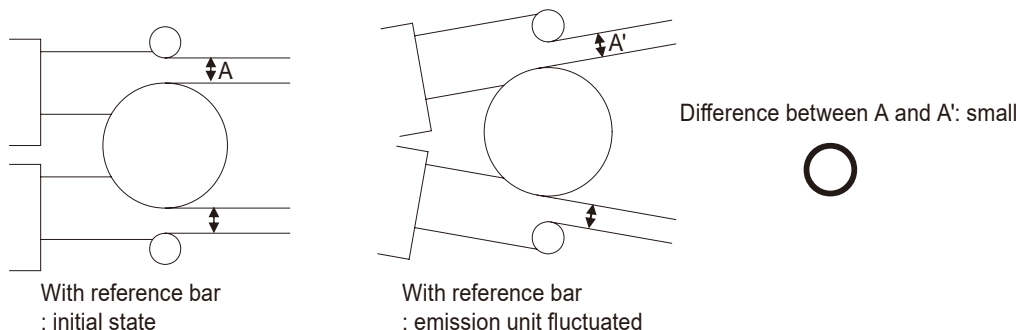


With reference bar
: initial state

With reference bar
: emission unit fluctuated


3 Fixture Design

- In a setup without reference bars, the fluctuation of the emission unit due to external force will produce a significant difference between measurements B and B', as shown below.

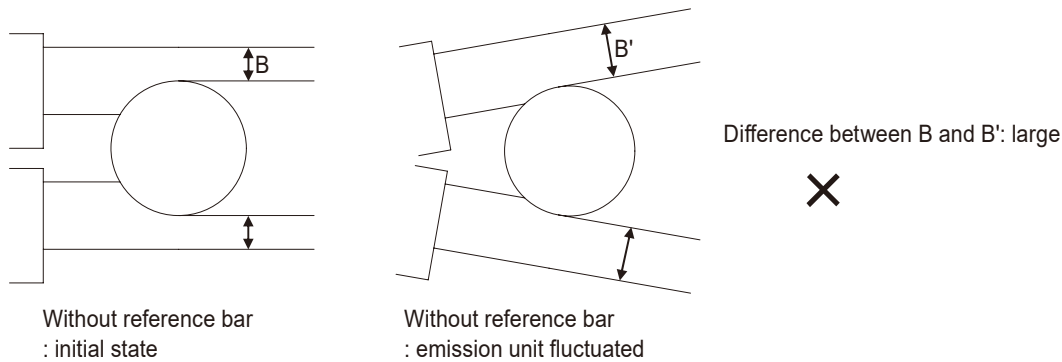

● Size of reference bars

- The diameter of the reference bars should be large enough (approx. 10 mm) to block the laser beam from passing through by more than 2 mm.
- The setup must be fairly robust so that the gap between the reference bars will not change while in service.

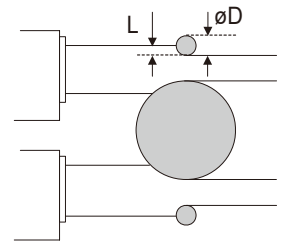

■ Parallelism adjustment

Set up two sensors integrating the emission and reception units so that the parallelism of the two sensors can be adjusted.

- First align the optical axis of each sensor, then adjust the parallelism between the two sensors.
- If the parallelism adjustment is inadequate, errors will occur when the workpiece is shifted in the optical axis direction.


Tips

The proper degree of accuracy depends on user requirements. For reference, three example accuracy ranges are given below.

- Should be $\pm 20 \mu\text{m}$ – $50 \mu\text{m}$ with the gage shifted within $\pm 50 \text{ mm}$ from the measuring position
- Should be $\pm 5 \mu\text{m}$ – $10 \mu\text{m}$ with the gage shifted within $\pm 10 \text{ mm}$ from the measuring position
- Should be $\pm 5 \mu\text{m}$ – $10 \mu\text{m}$ with the gage shifted within $\pm 5 \text{ mm}$ from the measuring position


Generally, the larger the amount of shift of the gage, the easier the adjustment will be.

The most appropriate size of the gage is the median value of the measuring range.

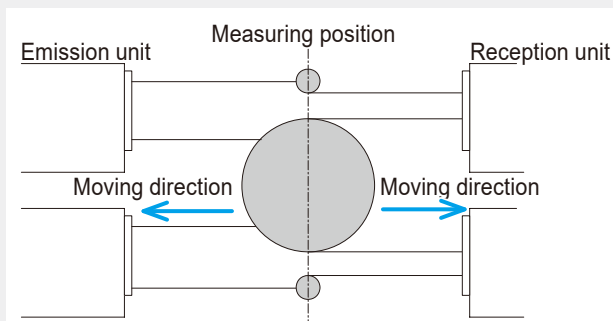


■ Transparent object measurement

- To measure a larger outer diameter transparent glass rod, the external diameter of a plastic object, or the width of a transparent sheet, arrange the sensors with the mounts facing so the scanning laser beams are opposing one another, and set the segment to (1 + 5). Otherwise, measurement may fail.

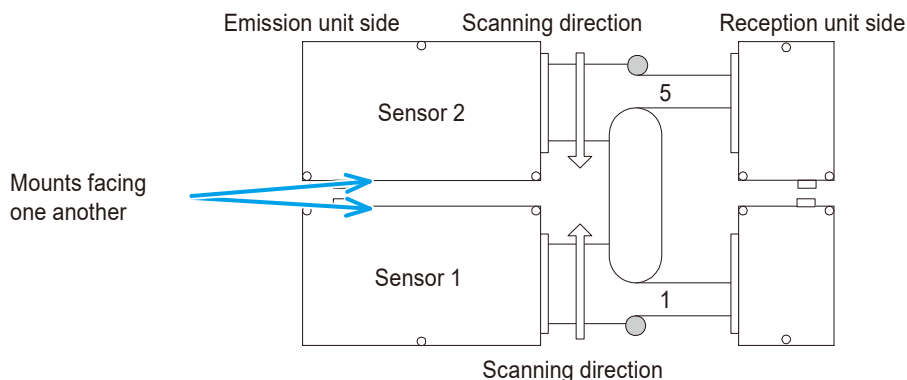


- If two sensors are set up with the mounts facing one another, step L will be produced between the two units, as shown at the right. The step values according to the model are listed below.

Model	Step: L
LSM-30-A	10 mm

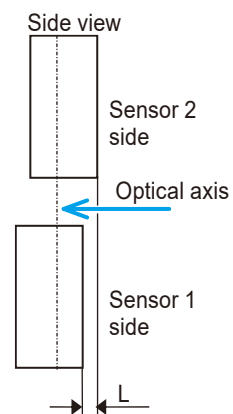

3.5 Radius of Cable Bend

The signal and connection cables will break if bent to an excessively small radius. Allow sufficient space for bending cables according to the figures below.

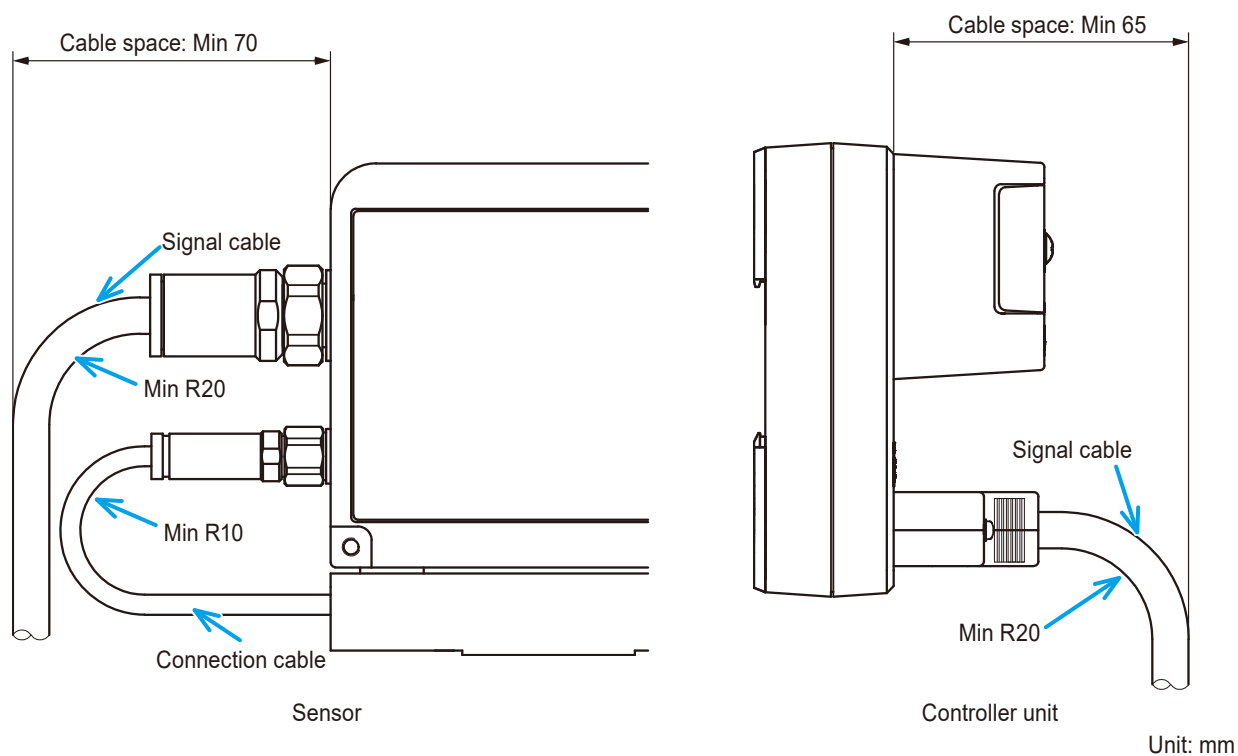

IMPORTANT

The supplied cables are not robot cables, which have superior flexibility. Special cables with high flexibility are available at extra cost. Contact a Mitutoyo sales office.

4 Inspection and Maintenance

This section describes the inspection and maintenance procedures for the sensor.

4.1 Cleaning Optical Parts

- Before cleaning the optical parts, turn off the power switch and disconnect the signal cable for safety.
- Always keep the protective glass of the emission and reception units clean.



Never remove the protective glass. If removed, the protection grade: IP67 is not guaranteed.

NOTICE

When cleaning, use a blower brush or gauze containing a small amount of solvent to clean optical components, and wipe gently without applying any force.

Do not use strong organic solvents such as benzene or thinner as they may stain the optical components or the main unit.

IMPORTANT

A soiled protective glass will result in reduced measurement accuracy, and possibly produce erroneous measured values due to dust and foreign particles being treated as part of the workpiece.

● Checking the contamination of the protective glass using an oscilloscope


Use the controller I/O interface to check the received signal. Connect pin No. 5 (scan signal output) and pin No. 6 (scan signal output ground) of the I/O terminal block connector to the probe of the oscilloscope to check the received signal.

For details on the I/O interface, see the separate  "Laser Scan Micrometer <Controller> User's Manual."

- Oscilloscope setting
 - Vertical sensitivity: 0.1 V/DIV for a probe of 1/10
 - Horizontal sensitivity: 100 μ s/DIV

- Oscilloscope waveform and measure

If the oscilloscope waveform indicates "Glass contaminated", clean the protective glass.

	Oscilloscope waveform	Measure
Normal		-
Glass contamination		Clean the protective glass to reduce the disorder of the waveform to less than 0.3 V

NOTICE

The protective glass of the windows is a precision optical part. Handle with care so as not to scratch the glass.

5 Troubleshooting

This chapter describes issues that may occur with this product and how to solve them.

Issue	Possible cause	Solution
Operation of this product is unstable. • Correct measurement values cannot be obtained. • This product re-starts.	This product is receiving electromagnetic interference that exceeds the requirements of the EMC Directive and the UK Electromagnetic Compatibility Regulations.	Eliminate the electromagnetic interference. This product resumes normal operation after the electromagnetic interference is eliminated.
Operation of other devices is unstable. This product is causing loss of specified functionality of other devices.	This product is being used in other than the intended operating environment. This product generates electromagnetic emissions in an industrial environment. This product is not intended for use outside of an industrial environment, and its use in residential areas or other environments may cause electromagnetic interference with other devices.	Implement countermeasures to prevent electromagnetic interference with other devices.

MEMO

6 Specifications of Sensor

6.1	LSM-02-A	32
6.2	LSM-30-A	35

This chapter describes the specifications of the following models:

Model	Measuring range	Code No.
LSM-02-A	0.005 mm – 2 mm	544-123
LSM-30-A	0.3 mm – 30 mm	544-124

6.1 LSM-02-A

■ Specifications

Model		LSM-02-A
Code No.		544-123
Connectable controller		LSM-CU-A
Measuring range	mm	0.005–2 0.05–2 ^{*1}
Minimum readout	μm	0.01
Repeat accuracy (2σ)^{*2}		
Full range(2mm)	μm	±0.03 ^{*3}
Middle range(1mm)		±0.015 ^{*3}
Linearity^{*2}	μm	±0.3 ^{*4}
Positional error^{*2 *5}	μm	±0.4
Measuring region	mm	1 x 2 (Optical axis direction x Scanning direction)
Number of scans for averaging	scans	16–2048 ^{*6}
Laser classification		Class 1 (maximum power: 1.0 mW, wavelength: 650 nm)
Number of laser scans	scans/s	3200
Laser scanning rate	m/s	76
Protection level		IP67 ^{*7}
Operating environment	Temperature	0 °C–40 °C
	Humidity	35 %–85 % (relative humidity, no condensation)
	Altitude	2000 m or lower
Storage environment	Temperature	-10 °C–50 °C
	Humidity	35 %–85 % (relative humidity, no condensation)
CE marking/ UKCA marking		EMC Directive/Electromagnetic Compatibility Regulations: EN IEC 61326-1 Immunity test requirement: Clause 6.2 Table2 Emission limit: ClassA RoHS Directive/The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations: EN IEC 63000

*1 Measuring range available when set to "Do not perform ultra-fine wire measurement" or "Edge specification" in the basic setup

*2 Various accuracy tests are performed on glass boards with chromium vapor deposition patterns.
Accuracy inspection environment/temperature: 20 °C ±1 °C, humidity: 50% ±10 °C

*3 The value of $\pm 2\sigma$ when a 2 mm/1 mm wide chrome pattern is measured for 2 minutes with a measurement interval of 0.32 seconds, where σ is the standard deviation

*4 The value in the center of the measuring region

*5 Error caused by moving the workpiece in the optical axis direction or scanning direction from the center of the measuring area

*6 The number of scans for averaging between 1 and 8 times is available if "Do not perform ultra-fine wire measurement" is specified in the basic setup. The measuring range, however, is limited to 0.05 mm to 2 mm in this case

6 Specifications of Sensor

*7 IP 67 is not guaranteed to be used while immersed in water.

Protection Grade: See IP 67. (For details, see IEC 60529, JIS C 0920.)

IP6X = Foreign matter protection: no foreign matter inside

IPX7 = Protection against water: no intrusion of water causing harmful effects when temporarily immersed in water at specified pressure and time

■ Standard accessories

Part No.	Item name	Quantity
02AGQ190	Signal cable (5 m)	1
99MBC153B	Quick Start Manual	1
02AGQ039	CD (containing the following files) • User's Manual (PDF) (this document)	1
02AXA914	Laser Class 1 Label	2
WA100	General product warranty (small)	1

■ Optional accessories

Part No.	Item name
02AGD110	Calibration gage (A)
02AGD200	Guide pulley unit (A)
02AGN780A/B	Extension signal cables (5 m/10 m)*1 *2
02AGQ465	Air blow cover for LSM-02-A

*1 The signal cable can be extended up to 20 m.

*2 Changing the length of the signal cable can affect measurement accuracy. If you change the cable length, be sure to perform calibration.



Sensor: 1.0 kg
Signal cable: 0.5 kg

6.2 LSM-30-A

■ Specifications

Model		LSM-30-A
Code No.		544-124
Connectable controller		LSM-CU-A
Measuring range	mm	0.3–30
Minimum readout	μm	0.01
Repeat accuracy (2σ)*¹		
Full range(30mm)	μm	±0.09* ²
Middle range(10mm)		±0.06* ²
Linearity * ¹	Whole range	μm ±1.0* ³
	Narrow range	μm ±(0.6+0.1ΔD)* ³ * ⁴
Positional error * ¹ * ⁵	Whole range (10 x 30)	μm ±1.8
	Central range (5 x 20)	μm ±1.0
Measuring region	mm	10 x 30 (Optical axis direction x Scanning direction)
Number of scans for averaging	scans	1–2048
Laser classification		Class 1 (maximum power: 1.0 mW, wavelength: 650 nm)
Number of laser scans	scans/s	3200
Laser scanning rate	m/s	226
Protection level		IP67* ⁶
Distance between Emission unit and Reception unit	mm	Standard: 130, Max.: 350* ⁷
	Temperature	0 °C–40 °C
	Humidity	35 %–85 % (relative humidity, no condensation)
Operating environment	Altitude	2000 m or lower
	Temperature	-10 °C–50 °C
Storage environment	Humidity	35 %–85 % (relative humidity, no condensation)
CE marking/ UKCA marking		EMC Directive/Electromagnetic Compatibility Regulations: EN IEC 61326-1 Immunity test requirement: Clause 6.2 Table2 Emission limit: ClassA RoHS Directive/The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations: EN IEC 63000

*1 Various accuracy tests are performed on glass boards with chromium vapor deposition patterns.
Accuracy inspection environment/temperature: 20 °C ±1 °C, humidity: 50% ±10 °C

*2 The value of ±2 σ when a 30 mm/10 mm wide chrome pattern is measured for 2 minutes with a measurement interval of 0.32 seconds, where σ is the standard deviation

*3 The value in the center of the measuring region

*4 ΔD is the difference in outer diameter from the master gage (Unit:mm)

*5 Error caused by moving the workpiece in the optical axis direction or scanning direction from the center of the measuring area

6 Specifications of Sensor

*6 IP 67 is not guaranteed to be used while immersed in water.

Protection Grade: See IP 67. (For details, see IEC 60529, JIS C 0920.)

IP6X = Foreign matter protection: no foreign matter inside

IPX7 = Protection against water: no intrusion of water causing harmful effects when temporarily immersed in water at specified pressure and time.

*7 When the distance between the light emitting and light receiving sections is extended beyond the standard distance (130 mm), a relay extension cable (special accessory) is required. Also, be sure to perform calibration because it may affect accuracy.

■ Standard accessories

Part No.	Item name	Quantity
02AGQ190	Signal cable (5 m)	1
99MBC153B	Quick Start Manual	1
02AGQ039	CD (containing the following files) • User's Manual (PDF) (this document)	1
02AXA914	Laser Class 1 Label	2
WA100	General product warranty (small)	1

■ Optional accessories

Part No.	Item name
02AGD130	Calibration gage set (B)
02AGQ450	Air-blow unit for LSM-30-A
02AGQ452	Laser stabilization cover
02AGD270	Workstage (B)
02AGD490	Adjustable workstage
02AGN780A/B/D	Extension signal cables (5 m/10 m/20 m) ^{*1 *2 *3}
02AGQ464A/B	Extension connection cables (1 m/3 m) ^{*2 *3 *4}
02AGQ461	Large diameter measurement kit 40 mm 90 mm
02AGQ462	Large diameter measurement kit 90 mm 140 mm
02AGQ463	Large diameter measurement kit 140 mm 180 mm


*1 The signal cable can be extended up to 29 m.

*2 The total length of the signal and connection cables can be extended up to 29 m.

*3 Changing the length of the signal cable can affect measurement accuracy. If you change the cable length, be sure to perform calibration.

*4 The connection cable can be extended up to 5 m.

■ Outline dimensional drawing

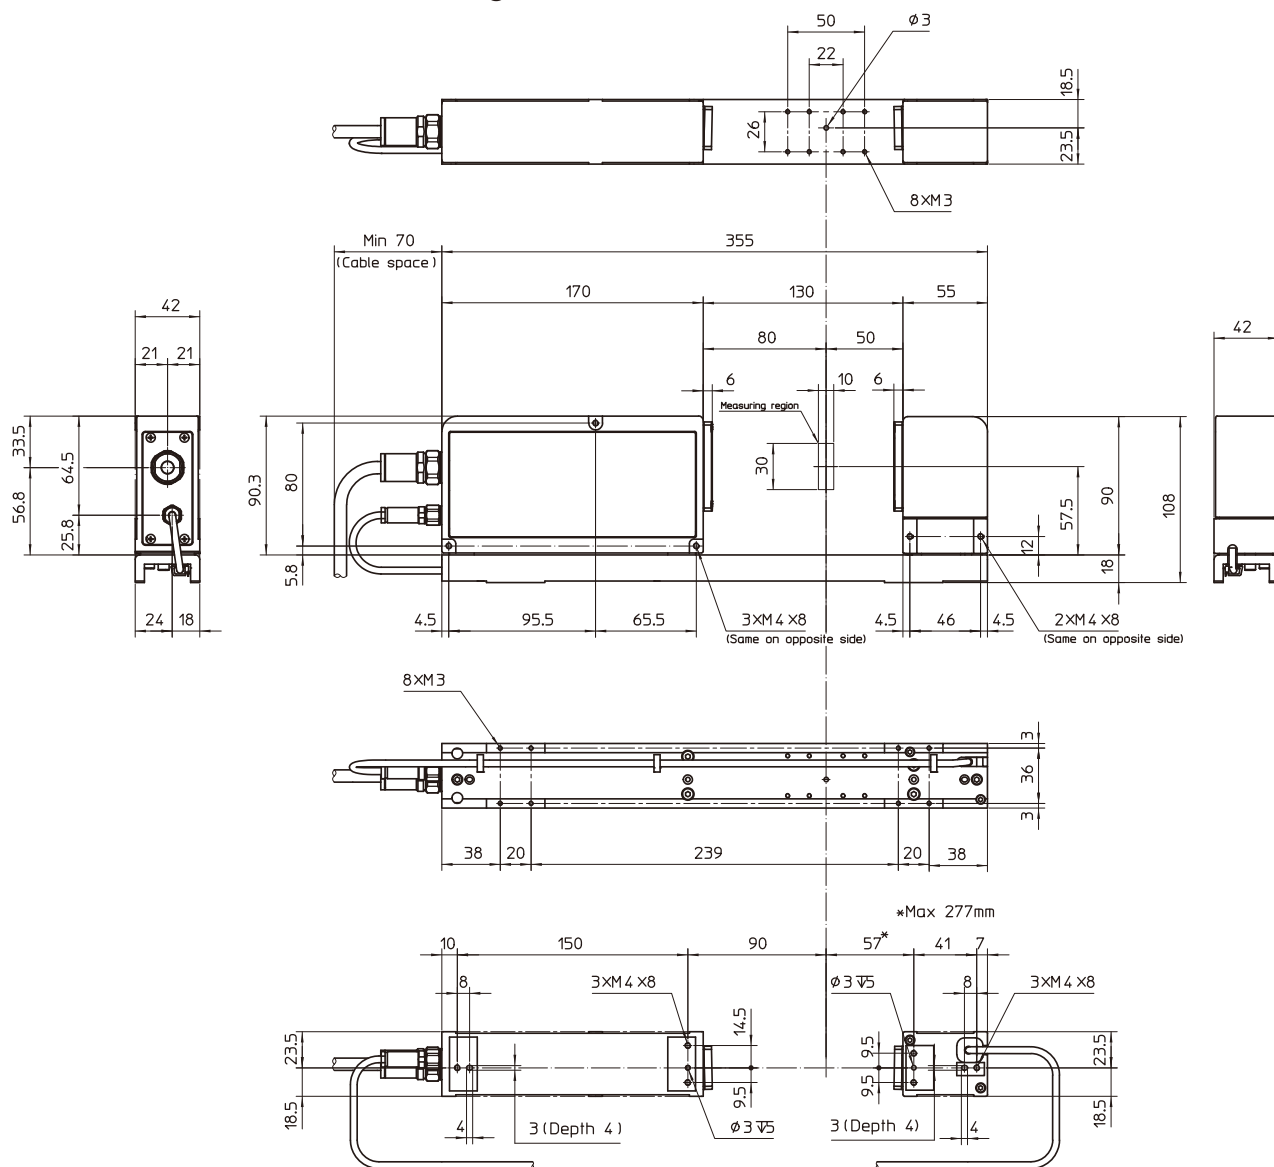

Mounting dimensions for separate use

Unit: mm

Mass

Emission unit: 1.1 kg

Reception unit: 0.6 kg

Base : 0.5 kg

Signal cable: 0.5 kg

SERVICE NETWORK

*As of May 2025

Europe

Mitutoyo Europe GmbH

Borsigstrasse 8-10, 41469 Neuss, GERMANY
TEL: 49 (0)2137 102-0 FAX: 49 (0)2137 102-351

Mitutoyo CTL Germany GmbH

Von-Gunzert-Strasse 17, 78727 Oberndorf, GERMANY
TEL: 49 (0)7423 8776-0 FAX: 49 (0)7423 8776-99

KOMEG Industrielle Messtechnik GmbH

Zum Wasserwerk 3, 66333 Völklingen, GERMANY
TEL: 49 (0)6898 91110 FAX: 49 (0)6898 911100

Germany

Mitutoyo Deutschland GmbH

Borsigstrasse 8-10, 41469 Neuss, GERMANY
TEL: 49 (0)2137 102-0 FAX: 49 (0)2137 86 85

M³ Solution Center Hamburg

Tempowerkring 9-im HIT-Technologiepark 21079
Hamburg, GERMANY
TEL: 49 (0)40 791894-0 FAX: 49 (0)40 791894-50

M³ Solution Center Berlin

Ernst-Lau-Straße 6, 12489 Berlin, GERMANY
TEL: 49 (0)30 2611 267 FAX: 49 30 67988729

M³ Solution Center Eisenach

Neue Wiese 4, 99817 Eisenach, GERMANY
TEL: 49 (0)3691 88909-0 FAX: 49 (0)3691 88909-9

M³ Solution Center Ingolstadt

Marie-Curie-Strasse 1A, 85055 Ingolstadt, GERMANY
TEL: 49 (0)841 954920 FAX: 49 (0)841 9549250

M³ Solution Center Leonberg

Am Längenbühl 3, 71229 Leonberg, GERMANY
TEL: 49 (0)7152 6080-0 FAX: 49 (0)7152 608060

Mitutoyo Deutschland GmbH - Small Tool Sales Division

Am Längenbühl 4, 71229 Leonberg, GERMANY
TEL: 49 (0)7152 9237-0 FAX: 49 (0)7152 9237-29

U.K.

Mitutoyo (UK) Ltd. HQ

Joule Road, West Point Business Park,
Andover, Hampshire SP10 3UX, UNITED KINGDOM
TEL: 44 (0)1264 353123 FAX: 44 (0)1264 354883

Coventry M³ Solution Centre

Unit6, Banner Park, Wickmans Drive, Coventry,
West Midlands CV4 9XA, UNITED KINGDOM
TEL: 44 (0)2476 426300

Halifax M³ Solution Centre

Lowfields Business Park, Navigation Close, Elland,
West Yorkshire HX5 9HB, UNITED KINGDOM
TEL: 44 (0)1422 375566

East Kilbride M³ Solution Centre

The Bairds Building, Rankine Avenue, Scottish
Enterprise Technology Park, East Kilbride G75
0QF, UNITED KINGDOM
TEL: 44 (0)1355 581170

France

Mitutoyo France

Paris Nord 2-123 rue de la Belle Etoile, BP 59267
ROISSY EN FRANCE 95957 ROISSY CDG
CEDEX, FRANCE
TEL: 33 (0)149 38 35 00

M³ Solution Center LYON

Parc Mail 523, cours du 3ème millénaire, 69791
Saint-Priest, FRANCE
TEL: 33 (0)149 38 35 70

M³ Solution Center STRASBOURG

Parc de la porte Sud, Rue du pont du péage,
67118 Geispolsheim, FRANCE
TEL: 33 (0)149 38 35 80

M³ Solution Center CLUSES

290 Avenue des Lacs, 74950 Scionzier,
FRANCE
TEL: 33 (0)1 49 38 35 90

M³ Solution Center TOULOUSE

Aeroparc Saint Martin Cellule B08 ZAC de Saint
Martin du Touch 12 rue de Caulet 31300
Toulouse, FRANCE
TEL: 33 (0)1 49 38 42 90

M³ Solution Center RENNES

2, rue Claude Chappe, PA le Vallon - ZAC
Mivoie, 35230 Noyal-Châtillon-sur-Seiche,
FRANCE
TEL: 33 (0)1 49 38 42 10

Italy

Mitutoyo Italiana S.r.l.

Corso Europa, 7 - 20045 Lainate (MI), ITALY
TEL: 39 02 935781 FAX: 39 02 93578255

M³ Solution Center BOLOGNA

Via Stalingrado 67/22D 40128 Bologna, ITALY
TEL: 39 02 93578215

M³ Solution Center CHIETI

Contrada Santa Calcagna - 66020 Rocca S. Giovanni (CH), ITALY
TEL: 39 02 93578280 FAX: 39 02 93578255

M³ Solution Center PADOVA

Via G. Galilei 21/F - 35035 Mestrino (PD), ITALY
TEL: 39 02 93578268 FAX: 39 02 93578255

Netherlands

Mitutoyo Nederland B.V.

Storkstraat 30, 3905 KX Veenendaal,
THE NETHERLANDS
TEL: 31(0)318-534911

Mitutoyo Nederland B.V. / M³ Solution Center Enschede

Institutenweg 50, 7521 PK Enschede,
THE NETHERLANDS
TEL: 31(0)318-534911

Mitutoyo Nederland B.V. / M³ Solution Center Eindhoven

De Run 1115, 5503 LB Veldhoven,
THE NETHERLANDS
TEL: 31(0)318-534911

Mitutoyo Research Center Europe B.V.

De Rijn 18, 5684 PJ Best, THE NETHERLANDS
TEL: 31(0)499-320200 FAX: 31(0)499-320299

Belgium

Mitutoyo Belgium N.V. / M³ Solution Center Melsele

Schaarbeekstraat 20, B-9120 Melsele, BELGIUM
TEL: 32 (0)3-2540444

Sweden

Mitutoyo Scandinavia AB

Släntvägen 6, 194 61 Upplands Väsby, SWEDEN
TEL: 46 (0)8 594 109 50

Mitutoyo Scandinavia AB / M³ Solution Center Alingsås

Ängsvaktaregatan 3A, 441 38 Alingsås, SWEDEN
TEL: 46 (0)8 594 109 50

Mitutoyo Scandinavia AB / M³ Solution Center Värnamo

Kalkstensvägen 7, 331 44 Värnamo, SWEDEN
TEL: 46 (0)8 594 109 50

Switzerland

Mitutoyo (Schweiz) AG

Steinackerstrasse 35, 8902 Urdorf, SWITZERLAND
TEL: 41 (0)447361150

Mitutoyo (Suisse) SA

Rue Galilée 4, 1400 Yverdon-les Bains, SWITZERLAND
TEL: 41 (0)244259422

Poland

Mitutoyo Polska Sp.z o.o.

Skrzypowa 1, 54-530 Wrocław, POLAND
TEL: 48 (0)71354 83 50 FAX: 48 (0)71354 83 55

Czech Republic

Mitutoyo Česko s.r.o.

Dubská 1626, 415 01 Teplice, CZECH REPUBLIC
TEL: 420 417-514-011 Email: info@mitutoyo.cz

Mitutoyo Česko s.r.o. M³ Solution Center Ivančice

Ke Karlovu 62/10, 664 91 Ivančice, CZECH REPUBLIC
TEL: 420 417-514-011 Email: info@mitutoyo.cz

Mitutoyo Česko s.r.o. M³ Solution Center Ostrava Mošnov

Mošnov 314, 742 51 Mošnov, CZECH REPUBLIC
TEL: 420 417-514-050 Email: info@mitutoyo.cz

Mitutoyo Česko s.r.o. Slovakia Branch

Šoltésovej 346/1, 017 01 Považská Bystrica, SLOVAKIA
TEL: 421 948-595-590 Email: info@mitutoyo.sk

Hungary

Mitutoyo Hungária Kft.

Galamb József utca 9, 2000 Szentendre, HUNGARY
TEL: 36 (30) 6410210

Romania

Mitutoyo Romania SRL

1A Drumul Garii Odai Street, showroom, Ground Floor, 075100 OTOPENI-ILFOV, ROMANIA
TEL: 40 (0)311012088 FAX: +40 (0)311012089

Showroom in Brasov

Strada Ionescu Crum Nr.1, Brasov Business Park Turnul 1, Mezanin, 500446 Brasov-Judetul Brasov, ROMANIA
TEL/FAX: 40 (0)371020017

Finland

Mitutoyo Scandinavia AB Finnish Branch

Autokeskuksentie 16B, 33960 Pirkkala, FINLAND

TEL: 358 (0)40 355 8498

Austria

Mitutoyo Austria GmbH

Salzburger Straße 260/2 und 260/3, 4600 Wels, AUSTRIA

TEL: 43 (0)7242 219 998

Mitutoyo Austria GmbH Goetzis Regional showroom

Lastenstrasse 48a, 6840 Götzis, AUSTRIA

Singapore

Mitutoyo Asia Pacific Pte. Ltd.

Head office / M³ Solution Center

24 Kallang Avenue, Mitutoyo Building, SINGAPORE 339415

TEL:(65)62942211 FAX:(65)62996666

Malaysia

Mitutoyo (Malaysia) Sdn. Bhd.

Kuala Lumpur Head Office / M³ Solution Center

Mah Sing Integrated Industrial Park, 4, Jalan Utarid U5/14, Section U5, 40150 Shah Alam, Selangor, MALAYSIA

TEL:(60)3-78459318 FAX:(60)3-78459346

Penang Branch office / M³ Solution Center

30, Persiaran Mahsuri 1/2, Sunway Tunas, 11900 Bayan Lepas, Penang, MALAYSIA

TEL:(60)4-6411998 FAX:(60)4-6412998

Johor Branch office / M³ Solution Center

70 (Ground Floor), Jalan Molek 1/28, Taman Molek, 81100 Johor Bahru, Johor, MALAYSIA

TEL:(60)7-3521626 FAX:(60)7-3521628

Thailand

Mitutoyo (Thailand) Co., Ltd.

Bangkok Head Office / M³ Solution Center

2327 Onnut Road Kwaeng Onnut Khet Suanluang Bangkok 10250, THAILAND

TEL:(66)2080 3500

Chonburi Branch / M³ Solution Center

7/1, Moo 3, Tambon Bowin, Amphur Sriracha, Chonburi 20230, THAILAND

TEL:(66)2080 3563 FAX:(66)3834 5788

ACC Branch / M³ Solution Center

122/8, 122/9, Moo 6, Tambon Donhuaroh, Amphur Muangchonburi, Chonburi 20000, THAILAND

TEL:(66)2080 3565

Indonesia

PT. Mitutoyo Indonesia

Head Office / M³ Solution Center

Jalan Sriwijaya No.26 Desa cibatu Kec. Cikarang Selatan Kab. Bekasi 17530, INDONESIA

TEL: (62)21-2962 8600 FAX: (62)21-2962 8604

Batam Branch Office

Business Center Adhya Building 3rd Floor Kompleks Permata Niaga Blok A No. 1, Jalan jendral Sudirman Kelurahan Sukajadi, Kecamatan Batam Kota, Kepulauan Riau 29444, INDONESIA

TEL: (62)-778-4888000

Vietnam

Mitutoyo Vietnam Co., Ltd

Hanoi Head Office / M³ Solution Center

1st & 2nd floor, MHDI Building, No. 60 Hoang Quoc Viet Road, Nghia Do Ward, Cau Giay District, Hanoi, VIETNAM

TEL:(84)24-3768-8963 FAX:(84)24-3768-8960

Ho Chi Minh City Branch Office / M³ Solution Center

Unit No. B-00.07, Ground Floor, C1 Building, No. 6, Street D9, An Loi Dong Ward, Thu Duc City, Ho Chi Minh City, VIETNAM

TEL:(84)28-3840-3489 FAX:(84)28-3840-3498

Hai Phong City Branch Office

Room 511, 5th Floor, Thanh Dat 3 Building, No. 4 Le Thanh Tong Street, May To Ward, Ngo Quyen District, Hai Phong City, VIETNAM

TEL:(84)22-5398-9909

Philippines

Mitutoyo Philippines, Inc.

Head Office / M³ Solution Center

Unit 1B & 2B LTI, Administration Building 1, Annex 1, North Main Avenue, Laguna Technopark, Binan Laguna 4024, PHILIPPINES

TEL/FAX:(63) 49 544 0272

India

Mitutoyo South Asia Pvt. Ltd. Head Office

C-122, Okhla Industrial Area, Phase-I, New Delhi-110 020, INDIA

TEL: (91) 11-40578485/86

MSA Technical Center

Plot no. 65, Ground Floor, Udyog Vihar, Phase-4 Gurgaon, Haryana - 122016, INDIA

TEL : (91) 124-2340286/287

Mumbai Region Head office

303, Sentinel Hiranandani Business Park Powai,
Mumbai-400 076, INDIA

TEL: (91) 22-25700684/685/837/839

Pune Office / M³ Solution Center

G4/G5, Pride Kumar Senate, Off. Senapati Bapat
Road, Pune-411 016, INDIA

TEL:(91) 20-25660043/44/45

Ahmedabad Office / M³ Solution Center

A-104 & A-105, First Floor, Solitaire Corporate
Park, Near Divya Bhaskar Press, S.G. Road,
Ahmedabad - 380 015, INDIA

TEL: (91) 079 - 29704902/903

Bengaluru Region Head office / M³ Solution Center

116/117-2, Ground Floor, Sy. No. 93 & 94, 3rd
Phase, Peenya Industrial Area, Bengaluru-560
058, INDIA

TEL: (91) 80-25630946/47/48/49

Coimbatore Office

Regus, Srivari Srimath, 3rd Floor, Door No:1045,
Avinashi Road, Coimbatore - 641 018,INDIA

TEL: (91) 9345005663

Chennai Office / M³ Solution Center

No. 624, Anna Salai Teynampet, Chennai-600 018, INDIA

TEL: (91) 44-24328823/24/25

Kolkata Office

Unit No. 1208,Om Tower, 32,J.L.Nehru Road,
Kolkata-700 071, INDIA

TEL: (91) 33-22267088/40060635/22266817

Taiwan**Mitutoyo Taiwan Co., Ltd. / M³ Solution Center Taipei**

4F., No.71, Zhouzi St., Neihu Dist.,Taipei City 114,
TAIWAN

TEL:886(2)5573-5900 FAX:886(2)8752-3267

Taichung Branch / M³ Solution Center Taichung

1F., No. 299, Gaotie 1st Rd., Wuri Dist., Taichung
City 414, TAIWAN

TEL:886(4)2338-6822 FAX:886(4)2338-6722

Kaohsiung Branch / M³ Solution Center Kaohsiung

1F., No.31-1, Haibian Rd., Lingya Dist.,
Kaohsiung City 802, TAIWAN

TEL:886(7)334-6168 FAX:886(7)334-6160

South Korea**Mitutoyo Korea Corporation****Head Office / M³ Solution Center**

33, Eungyejungang-ro 306beon-gil, Siheung-si,
Gyeonggi-do, 15120 KOREA

TEL:82(31)361-4200 FAX:82(31)361-4201

Busan Office / M³ Solution Center

(3150-3, Daejeo 2-dong) 8,Yutongdanji 1-ro
49beon-gil, Gangseo-gu, Busan, 46721 KOREA

TEL:82(51)324-0103 FAX:82(51)324-0104

Daegu Office / M³ Solution Center

(Galsan-dong, Daegu Business Center), 301-Ho, 217,
Seongseogongdan-ro, Dalseo-gu, Daegu 42704 KOREA

TEL:82(53)593-5602 FAX:82(53)593-5603

China**Mitutoyo Measuring Instruments (Shanghai) Co., Ltd.**

18/F, NEW BUND Shun Tak Center, No.18, Lane
666, West Haiyang Road, Pudong New District,
Shanghai 200124, CHINA

TEL:86(21)5836-0718 FAX:86(21)5836-0717

Suzhou Office / M³ Solution Center China (Suzhou)

1/2 Floor, Building 4, No.175 Songbei Road,
Suzhou Free Trade Zone, Suzhou City, Jiangsu
215000, CHINA

TEL:86(512)6522-1790 FAX:86(512)6251-3420

Wuhan Office / M³ Solution Corner

Room 1701, Wuhan Wanda Center, No. 96,
Linjiang Road, Wuchang District, Wuhan
Hubei 430060, CHINA

TEL:86(27)8544-8631 FAX:86(27)8544-6227

Chengdu Office

Room 1-102, 1st Floor, Unit 1, Building 1, No. 24,
Wannian Road (Wannianchang Cool), Chenghua
District, Chengdu City, Sichuan 610056, CHINA

TEL:86(28)8671-8936 FAX:86(28)8671-9086

Hangzhou Office

Room 329, 3F, Building D, West Square of
Hangzhoudong Railway Station, No. 260 Xin-
feng Road, Shangcheng District, Hangzhou City,
Zhejiang 310002, CHINA

TEL: 86(571)8288-0319 FAX: 86(571)8288-0320

Tianjin Office / M³ Solution Center China (Tianjin)

Room D 12/F, TEDA Building, No.256 Jie-fang
Nan Road Hexi District,Tianjin 300042, CHINA

TEL:86(22)5888-1700 FAX:86(22)5888-1701

Changchun Office

Room 815, 8F, Building A1, Upper East
International No.3000 Dongsheng Street,
Erdao District, Changchun, Jilin, 130031, CHINA

TEL:86(431)8192-6998 FAX:86(431)8192-6998

Chongqing Office

Room 1312, Building 3, Zhongyu Plaza, No.86,
Hongjin Avenue,Longxi Street, Yubei District,
Chongqing, 400000, CHINA

TEL:86(23)6595-9950 FAX:86(23)6595-9950

Qingdao Office

Room 638, 6F, No.192 Zhengyang Road, Chengyang District, Qingdao, Shandong, 266109, CHINA
TEL:86(532)8096-1936 FAX:86(532)8096-1937

Xi'an Office

Room 1503 Jianke Building, No.99 Yanta Road, Beilin District, Xi'an City, Shaanxi 710054, CHINA
TEL:86(29)8538-1380 FAX:86(29)8538-1381

Dalian Office / M³ Solution Center China (Dalian)

Room A-106 Shuijing SOHO, No.16 Harbin Road, Economic Development Zone, Dalian, 116600 CHINA
TEL:86(411)8718 1212 FAX:86(411)8754-7587

Zhengzhou Office

Room 5003, 50th Floor, South Tower of Greenland Centre, No.36 Yulin North Road, Zhengdong New District, Zhengzhou, Henan, 450000, CHINA
TEL:86(371)6097-6436 FAX:86(371)6097-6981

Dongguan Office / M³ Solution Center China (Dongguan)

Room 801, No 65, Chang'an Section Guanchang Road, Chang'an Town, Dongguan City, Guangdong 523841, CHINA
TEL:86(769)8541 7715 FAX:86(769)-8541 7745

Fuzhou Office

Unit 03, 7th floor of East Tower, Sansheng International Center, No.118 Wusi Road, Gulou District, Fuzhou City, Fujian 350001, CHINA
TEL: 86 (591) 8761 8095
FAX: 86 (591) 8761 8096

Changsha Office

Room 2207, Building 1, Shiner International Plaza, No. 88, Kaiyuan Middle Road, Changsha City, Hunan 410100, CHINA
TEL: 86 (731) 8401 9276
FAX: 86 (731) 8401 9376

Changzhou Office

Room 1502, Joint Financial Tower, No.255, Tongjiang North Road, Tianning District, Changzhou City, Jiangsu 2130002, CHINA
TEL:86(519)8815 8319 FAX:86(519)8815 8319

Wenzhou Office

Room 512, Building 4, Xinjingdujiayuan, Sanyang Street, Ou Hai District, Wenzhou City, Zhejiang 325014, CHINA
TEL:86(577)8641 5280

Shunde Office

Room 1603, Building 26, Vanke Golden Riverside Plaza Phase II, No.13 Mid DeSheng Road, Shunde District, Foshan City, Guangdong 528300, CHINA
TEL/FAX: 86(757)2228 8621

Hefei Office

Unit B3111-1, 1F, Block B3, Huliandadi Huiyuan, Heping Road, Yaohai District, Hefei City, Anhui 230001, CHINA
TEL: 86(551)6560 1006

Mitutoyo Measuring Technology (Suzhou) Co., Ltd.

1/2 Floor, Building 4, No.175 Songbei Road, Suzhou Free Trade Zone, Suzhou City, Jiangsu 215000, CHINA
TEL:86(512)6252-2660 FAX:86(512)6252-2580

USA

Mitutoyo America Corporation

965 Corporate Blvd., Aurora, IL 60502, U.S.A.
TEL:1-(630)820-9666 Toll Free No. 1-888-648-8869
FAX:1-(630)978-3501

Headquarters (Aurora) / M³ Solution Center

965 Corporate Blvd., Aurora, IL 60502, U.S.A.

Seattle (Renton) Office / M³ Solution Center

1000 SW 34th St. Suite G, Renton, WA 98057 U.S.A.
TEL:1-(888)-648-8869

Houston Office / M³ Solution Center

4560 Kendrick Plaza Drive Suite 120 Houston, TX 77032, U.S.A.
TEL:1-(888)-648-8869 FAX:1-(281)227-0937

Cincinnati (Mason) Office / M³ Solution Center

6220 Hi-Tek Ct., Mason, OH 45040, U.S.A.
TEL:1-(888)-648-8869 FAX:1-(513)754-0718

Detroit (Novi) Office / M³ Solution Center

46850 Magellan Drive, Suite 100 Novi, MI 48377, U.S.A.
TEL:1-(888)-648-8869 FAX: 1-(248)-926-0928

Los Angeles (City of Industry) Office / M³ Solution Center

16925 E. Gale Ave., City of Industry, CA 91745, U.S.A.
TEL:1-(888)-648-8869 FAX:1-(626)369-3352

Charlotte (Huntersville) Office / M³ Solution Center

11515 Vanstory Dr., Suite 140, Huntersville, NC 28078, U.S.A.
TEL:1-(888)-648-8869 FAX:1-(704)875-9273

Boston (Marlborough) Office / M³ Solution Center

753 Forest Street, Suite 110, Marlborough, MA 01752, U.S.A.
TEL:1-(888)648-8869 FAX:1-(508)485-0782

West Chester (Ohio) / Metrology Service Center

8876 Beckett road, West Chester, OH 45069, USA

TEL:1-(888)-648-8869

Mitutoyo America Corporation Calibration Lab

965 Corporate Blvd., Aurora, IL 60502, U.S.A.

TEL:1-(888)-648-8869 FAX:1-(630)978-6477

Mitutoyo America Corporation CT-Lab Chicago

965 Corporate Blvd., Aurora, IL 60502, U.S.A.

TEL: 1-(888)-648-8869 FAX: 1-(630)-820-3418

Mitutoyo Research & Development America, Inc.

11533 NE 118th St., Kirkland, WA 98034-7111, U.S.A.

TEL:1-(425)821-3906 FAX:1-(425)821-32280

Mitutoyo Research & Development America, Inc. - California Office

16925 Gale Ave. City of Industry, CA 91745-1806 U.S.A.

TEL: 1-(425)821-3906 FAX: 1-(425)821-3228

Canada

Mitutoyo Canada Inc.

2121 Meadowvale Blvd., Mississauga, Ont. L5N 5N1., CANADA

TEL:1-(905)821-1261 FAX:1-(905)821-4968

Montreal Office

7075 Place Robert-Joncas Suite 129, Montreal, Quebec H4M 2Z2, CANADA

TEL:1-(514)337-5994 FAX:1-(514)337-4498

Brazil

Mitutoyo Sul Americana Ltda.

Head office / M³ Solution Center

Avenida Mimes nº 25 – Loteamento Multivias II, Jardim Ermida I, CEP 13212-216 Jundiaí - SP, BRASIL

TEL: 55 (11) 5643-0004/0041

Filial Curitiba / M³ Solution Center

Rua Sergipe, nº 101, Sala A, Bairro Boneca do Iguacu, São José dos Pinhais – Paraná – BRASIL CEP 83040120

TEL: 55 (41) 3534-1728

Filial Joinville / M³ Solution Center

Rua Sorocaba, No.265, Bairro Floresta, Joinville, Santa Catarina, BRASIL, CEP 89212-210

TEL: 55 (47) 3025-8062

Filial Porto Alegre / M³ Solution Center

Rua Emilio Boeckel nº 325, Bairro: Flao, São Leopoldo - RS, BRASIL CEP 93020-600

TEL: 55 (51) 3037-9383

Argentina

Mitutoyo Sul Americana Ltda.

Argentina Branch / M³ Solution Center

AV. MITRE 1249 Piso. PB– FLORIDA – BUENOS AIRES ARGENTINA

TEL:54 (11) 4730-1433 FAX:54 (11) 4730-1411

Mexico

Mitutoyo Mexicana, S.A. de C.V.

Industria Eléctrica No.15, Parque Industrial, Naulcalpan de Juárez, Estado de México C.P.53370, MÉXICO

TEL: 52 (01-55) 5312-5612

FAX: 52 (01-55) 5312-3380

Monterrey Office / M³ Solution Center

Blv. Interamericana No. 103, Parque Industrial FINSA, C.P. 66636 Apodaca, N.L., MÉXICO

TEL: 52(01-81) 8398-8227/8228/8242/8244

FAX: 52(01-81) 8398-8226

Tijuana Office / M³ Solution Center

Calle José María Velazco 10501-C, Col. Cd. Industrial Nueva Tijuana, C.P. 22500 Tijuana, B.C., MÉXICO

TEL: 52 (01-664) 647-5024

Querétaro Office / M³ Solution Center

Av. Cerro Blanco No.500-1, Colonia Centro Sur, Querétaro, Querétaro, C.P. 76090, MÉXICO

TEL: 52 (01-442) 340-8018, 340-8019 and 340-8020

FAX: 52 (01-442) 340-8017

Mitutoyo Mexicana, S.A. de C.V. Querétaro Calibration Laboratory

Av. Cerro Blanco 500 30 Centro Sur, Querétaro, Querétaro, C.P. 76090, MÉXICO

TEL: 52 (01-442) 340-8018, 340-8019 and 340-8020

FAX: 52 (01-442) 340-8017

Aguascalientes Office / M³ Solution Center

Av. Aguascalientes No. 622, Local 15 Centro Comercial El Cilindro Fracc. Pulgas Pandas Norte, C.P. 20138, Aguascalientes, Ags. MÉXICO

TEL: 52 (01-449) 174-4140 and 174-4143

Irapuato Office / M³ Solution Center

Boulevard a Villas de Irapuato No. 1460 L.1 Col. Ejido Irapuato C.P. 36643

Irapuato, Gto., MÉXICO

TEL: 52 (01-462) 144-1200 and 144-1400

Revision Record

Date of publication	Revision status	Details of revision
June 1, 2023	First edition	Publication
June 1, 2025	Revised first edition	Change of China RoHS compliance and Correction

Mitutoyo Corporation

20-1, Sakado 1-Chome, Takatsu-ku, Kawasaki-shi, Kanagawa 213-8533, Japan
Tel: +81 (0)44 813-8230 Fax: +81 (0)44 813-8231
Home page: <https://www.mitutoyo.co.jp/global.html>

For the EU Directive, Authorized representative and importer in the EU:
Mitutoyo Europe GmbH
Borsigstrasse 8-10, 41469 Neuss, Germany

For the UK Regulation, Authorized representative and importer in the UK:
Mitutoyo (UK) Ltd.
Joule Road, West Point Business Park, Andover, Hampshire SP10 3UX, UNITED KINGDOM